

'cause I wanna.wordpress.com @2013

Brother 2340 CV Coverstitch machine - Removing the Fabric

What you'll need: Scissors and Allen wrench that come with the machine.



1. By hand, turn the hand wheel **FORWARD (towards you)** until the needle is in the highest position. Do NOT turn the hand wheel backwards! This method works only if you turn the hand wheel FORWARD.



2. Place your fingernail behind one of the needle threads above the presser foot.



3. With your other hand push the tension lever for the same needle thread and pull the thread forward for several inches.



4. Repeat step 3 for the other needle threads.




5. Lift the presser foot. Using the Allen wrench (Allen Key) that came with the machine, swipe the Allen wrench under the presser foot, from the **BACK TO THE FRONT**. This pulls the needle threads underneath the presser foot.



6. Cut the needle threads near the Allen wrench (Allen Key). This isn't how I cut the thread but you get the point 😊



7. With one hand pull the fabric **BACKWARDS**, out from underneath the presser foot, **WHILE** pushing the tension lever for the looper with your other hand. The needle threads will automatically pull to the wrong side. (Sorry for the poor photos. My camera battery died and I had to use my cell phone)

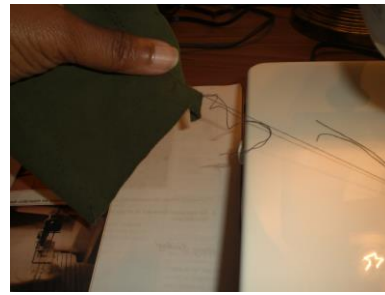

8. Cut your looper thread and tie off your threads. Your machine is now ready to start stitching again.



I hope this helps!